

Figure 7.10—Roof-framing details

SHEATHING AND TRIM

Install the windows by nailing the vinyl flanges onto the rough opening studs before covering the walls. Sheathe the shed walls with horizontal 1x8 rough-sawn shiplapped boards, and cover the ends of the boards with 1x4 cedar trim (see Figure 7.11). Do not attach the 1x8 front fascia until the doors are hung. Nail the 1x6 soffit underneath the ends of the rear rafters, and nail the rear 1x6 fascia to the rafter ends.

ROOFING

Install the brown aluminum eave starter strips at the bottom edge of the roofs, and nail on 18-inch red cedar shingles with 5½ inches exposure. Use a 1x6 board as a straightedge to line up the bottom of the shingles as you proceed up the roof. Be sure to cut and install the 1x4 wall and fascia trim before shingling, allowing the shingles to overlap the trim pieces by ½ inch. Add a 12-inch-wide strip of aluminum flashing at the top of the front roof before adding the sheathing to the clerestory. Cap the top edge of the rear roof with aluminum flashing and 1x6 and 1x2 trim.

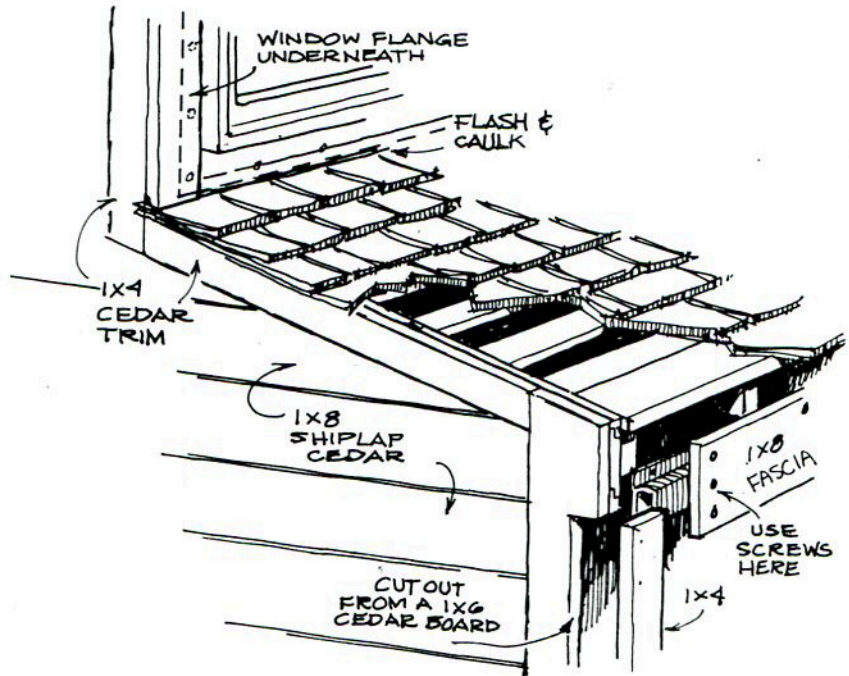


Figure 7.11—Trim